

MBa8MPxL Preliminary User's Manual

MBa8MPxL UM 0002 16.03.2021







TABLE OF CONTENTS

1.	ABOUT THIS MANUAL	
1.1	Copyright and license expenses	
1.2	Registered trademarks	
1.3	Disclaimer	
1.4	Imprint	
1.5	Tips on safety	
1.6	Symbols and typographic conventions	
1.7	Handling and ESD tips	
1.8	Naming of signals	
1.9	Further applicable documents / presumed knowledge	3
2.	BRIEF DESCRIPTION	4
2.1	MBa8MPxL block diagram	4
2.2	MBa8MPxL interfaces, overview	5
2.3	MBa8MPxL interfaces, location	6
3.	ELECTRONICS	8
3.1	MBa8MPxL functional groups	8
3.1.1	TQMa8MPxL overview	
3.1.2	TQMa8MPxL pinout	
3.1.3	1 ² C devices, address mapping	
3.1.4	RTC backup	
3.1.5	Temperature sensor	
3.1.6	Fan	
3.1.7	Reset	11
3.2	Power supply	12
3.2.1	Protective circuitry	
3.3	Communication interfaces	
3.3.1	Ethernet 1000 Base-T (RGMII)	
3.3.2	SD card interface	
3.3.3	USB 3.0 Hub	
3.3.4	USB 3.0 OTG	
3.3.5	PCIe M.2	
3.3.6	Debug UART	
3.3.7	MIPI DSI / DisplayPort	
3.3.8	MIPI CSI	
3.3.9	LVDS	
3.3.10	HDMI	
3.3.11	CAN FD	
3.3.12	Audio	
3.3.13	ECSPI	
3.3.14	SPDIF	
3.3.15	GPT	25
3.3.16	PWM	25
3.3.17	CCM	25
3.3.18	TSE chip	25
3.3.19	IO extension	
3.3.20	Pin header	27
3.4	Diagnostic and user interfaces	
3.4.1	Boot Mode configuration	
3.4.2	Pushbuttons	
3.4.3	Reset button	
3.4.4	Status LEDs	
3.4.5	GPIO	
346	ITAG®	32



TABLE OF CONTENTS (continued)

4.	SOFTWARE	32
5.	MECHANICS	
5.1	MBa8MPxL dimensions	33
5.2	Embedding in the overall system	33
5.3	Housing	33
5.4	Thermal management	33
5.5	Assembly	
6.	SAFETY REQUIREMENTS AND PROTECTIVE REGULATIONS	35
6.1	EMC	35
6.2	ESD	35
6.3	Operational safety and personal security	35
7.	CLIMATIC AND OPÉRATIONAL CONDITIONS	
7.1	Protection against external effects	35
7.2	Reliability and service life	35
8.	ENVIRONMENT PROTECTION	36
8.1	RoHS	36
8.2	WEEE [®]	36
8.3	REACH®	36
8.4	EuP	36
8.5	Packaging	36
8.6	Batteries	36
8.6.1	General notes	36
8.6.2	Lithium batteries	36
8.7	Other entries	36
9.	APPENDIX	37
9.1	Acronyms and definitions	37
92	References	30



TABLE DIRECTORY

Table 1:	Terms and conventions	2
Table 2:	Data interfaces	5
Table 3:	Diagnostic and user interfaces	
Table 4:	I ² C devices, address mapping on TQMa8MPxL and MBa8MPxL	9
Table 5:	Temperature sensor SE97BTP, D1	10
Table 6:	Pinout fan connector, X24	10
Table 7:	Reset signals	11
Table 8:	Pinout RJ45 Ethernet connector, X66	13
Table 9:	Pinout microSD card, X42	14
Table 10:	Pinout SIM card, X46	16
Table 11:	Pinout M.2, B key, X48	17
Table 12:	Pinout DisplayPort, X65	19
Table 13:	Pinout MIPI CSI, X57	20
Table 14:	Pinout LVDS data, X11	21
Table 15:	Pinout LVDS control, X7	21
Table 16:	Pinout HDMI connector, X44	22
Table 17:	Pinout CAN FD connectors, X18, X19	23
Table 18:	Pinout audio connectors, X15, X16, X17	24
Table 19:	Pinout IO extension connector, X555	26
Table 20:	Current load at pin headers	
Table 21:	Signals with IO functionality	27
Table 22:	Pinout header X61	28
Table 23:	Pinout header X62	29
Table 24:	Pinout header X63	29
Table 25:	Boot Source options TQMa8MPxL	
Table 26:	Status LEDs	
Table 27:	Pinout JTAG® pin header, X22	32
Table 28:	Labels on MBa8MPxL	
Table 29:	Climatic and operational conditions MBa8MPxL	
Table 30:	Acronyms	
Table 31:	Further applicable documents	



FIGURE DIRECTORY

Figure 1:	Block diagram MBa8MPxL	4
Figure 2:	MBa8MPxL interfaces top	
Figure 3:	MBa8MPxL interfaces bottom	7
Figure 4:	Block diagram TQMa8MPxL	8
Figure 5:	Block diagram I ² C bus	9
Figure 6:	Block diagram MBa8MPxL Reset structure	11
Figure 7:	Block diagram power supply MBa8MPxL	12
Figure 8:	MBa8MPxL protective circuit	
Figure 9:	Block diagram Ethernet 1000 Base-T	13
Figure 10:	Block diagram SD card interface, MBa8MPxL	14
Figure 11:	Block diagram USB 3.0 Hub	15
Figure 12:	Block diagram USB 3.0 OTG	15
Figure 13:	Block diagram PCle M.2	16
Figure 14:	Block diagram UARTs	
Figure 15:	Block diagram DisplayPort	19
Figure 16:	Block diagram MIPI CSI	20
Figure 17:	Block diagram LVDS	21
Figure 18:	Block diagram HDMI	
Figure 19:	Block diagram CAN FD interface	23
Figure 20:	Block diagram audio interface	24
Figure 21:	Block diagram IO extension	26
Figure 22:	Block diagram pushbuttons	30
Figure 23:	Block diagram JTAG	32
Figure 24:	MBa8MPxL dimensions	33
Figure 25:	MBa8MPxL component placement top	34
Figure 26:	MBa8MPxL component placement bot	



REVISION HISTORY

Rev.	Date	Name	Pos.	Modification
0001	06.03.2021	Petz		First edition
0002	16.03.2021	Petz	All Figure 1 Table 2 Table 22, Table 23, Table 24 5.1 Figure 24	Non-functional changes, expressions, phrases Updated "3.3 V" for X555 removed "Level" and "Dir." for 1.8 V, 3.3 V, and 5 V added Weight corrected (147 grams 143 grams) Corrected



1. ABOUT THIS MANUAL

1.1 Copyright and license expenses

Copyright protected © 2021 by TQ-Systems GmbH.

This Preliminary User's Manual may not be copied, reproduced, translated, changed or distributed, completely or partially in electronic, machine readable, or in any other form without the written consent of TQ-Systems GmbH.

The drivers and utilities for the components used as well as the BIOS are subject to the copyrights of the respective manufacturers. The licence conditions of the respective manufacturer are to be adhered to.

Bootloader-licence expenses are paid by TQ-Systems GmbH and are included in the price.

Licence expenses for the operating system and applications are not taken into consideration and must be calculated / declared separately.

1.2 Registered trademarks

TQ-Systems GmbH aims to adhere to copyrights of all graphics and texts used in all publications, and strives to use original or license-free graphics and texts.

All brand names and trademarks mentioned in this Preliminary User's Manual, including those protected by a third party, unless specified otherwise in writing, are subjected to the specifications of the current copyright laws and the proprietary laws of the present registered proprietor without any limitation. One should conclude that brand and trademarks are rightly protected by a third party.

1.3 Disclaimer

TQ-Systems GmbH does not guarantee that the information in this Preliminary User's Manual is up-to-date, correct, complete or of good quality. Nor does TQ-Systems GmbH assume guarantee for further usage of the information. Liability claims against TQ-Systems GmbH, referring to material or non-material related damages caused, due to usage or non-usage of the information given in this Preliminary User's Manual, or due to usage of erroneous or incomplete information, are exempted, as long as there is no proven intentional or negligent fault of TQ-Systems GmbH.

TQ-Systems GmbH explicitly reserves the rights to change or add to the contents of this Preliminary User's Manual or parts of it without special notification.

Important Notice:

Before using the MBa8MPxL or parts of the MBa8MPxL schematics, you must evaluate it and determine if it is suitable for your intended application. You assume all risks and liability associated with such use. TQ-Systems GmbH makes no other warranties including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose. Except where prohibited by law, TQ-Systems GmbH will not be liable for any indirect, special, incidental or consequential loss or damage arising from the usage of the MBa8MPxL or schematics used, regardless of the legal theory asserted.

1.4 Imprint

TQ-Systems GmbH Gut Delling, Mühlstraße 2

D-82229 Seefeld

Tel: +49 8153 9308-0 Fax: +49 8153 9308-4223 E-Mail: Info@TQ-Group Web: TQ-Group



1.5 Tips on safety

Improper or incorrect handling of the product can substantially reduce its life span.

1.6 Symbols and typographic conventions

Table 1: Terms and conventions

Symbol	Meaning
	This symbol represents the handling of electrostatic-sensitive modules and / or components. These components are often damaged / destroyed by the transmission of a voltage higher than about 50 V. A human body usually only experiences electrostatic discharges above approximately 3,000 V.
4	This symbol indicates the possible use of voltages higher than 24 V. Please note the relevant statutory regulations in this regard. Non-compliance with these regulations can lead to serious damage to your health and cause damage / destruction of the component.
<u>^!</u>	This symbol indicates a possible source of danger. Acting against the procedure described can lead to possible damage to your health and / or cause damage / destruction of the material used.
Â	This symbol represents important details or aspects for working with TQ-products.
Command	A font with fixed-width is used to denote commands, file names, or menu items.

1.7 Handling and ESD tips

General handling of your TQ-products



The TQ-product may only be used and serviced by certified personnel who have taken note of the information, the safety regulations in this document and all related rules and regulations.

A general rule is not to touch the TQ-product during operation. This is especially important when switching on, changing jumper settings or connecting other devices without ensuring beforehand that the power supply of the system has been switched off.

Violation of this guideline may result in damage / destruction of the MBa8MPxL and be dangerous to your health.

Improper handling of your TQ-product would render the guarantee invalid.

Proper ESD handling



The electronic components of your TQ-product are sensitive to electrostatic discharge (ESD). Always wear antistatic clothing, use ESD-safe tools, packing materials etc., and operate your TQ-product in an ESD-safe environment. Especially when you switch modules on, change jumper settings, or connect other devices.



1.8 Naming of signals

A hash mark (#) at the end of the signal name indicates a low-active signal.

Example: RESET#

If a signal can switch between two functions and if this is noted in the name of the signal, the low-active function is marked with a hash mark and shown at the end.

Example: C / D#

If a signal has multiple functions, the individual functions are separated by slashes when they are important for the wiring. The identification of the individual functions follows the above conventions.

Example: WE2# / OE#

1.9 Further applicable documents / presumed knowledge

• Specifications and manual of the modules used:

These documents describe the service, functionality and special characteristics of the module used (incl. BIOS).

• Specifications of the components used:

The manufacturer's specifications of the components used, for example CompactFlash cards, are to be taken note of. They contain, if applicable, additional information that must be taken note of for safe and reliable operation. These documents are stored at TQ-Systems GmbH.

Chip errata:

It is the user's responsibility to make sure all errata published by the manufacturer of each component are taken note of. The manufacturer's advice should be followed.

• Software behaviour:

No warranty can be given, nor responsibility taken for any unexpected software behaviour due to deficient components.

General expertise:

Expertise in electrical engineering / computer engineering is required for the installation and the use of the device.

The following documents are required for full comprehension of this Preliminary User's Manual:

- MBa8MPxL schematics
- TQMa8MPxL Preliminary User's Manual
- i.MX 8M Plus Data Sheet
- i.MX 8M Plus Reference Manual
- U-Boot documentation: <u>www.denx.de/wiki/U-Boot/Documentation</u>
- Yocto documentation: <u>www.yoctoproject.org/docs/</u>
- TQ-Support Wiki: https://support.tq-group.com/en/layerscape/tqma8mpxl



2. BRIEF DESCRIPTION

This Preliminary User's Manual describes the hardware of the MBa8MPxL as of revision 0100.

The MBa8MPxL is designed as a carrier board for the TQMa8MPxL. The TQMa8MPxL is directly soldered on the MBa8MPxL. Core of the MBa8MPxL is the TQMa8MPxL with an NXP i.MX 8M Plus CPU based on a Dual or Quad Cortex®-A53.

The TQMa8MPxL connects all peripheral components. In addition to the standard communication interfaces such as USB, Ethernet, SD card, etc., most other available TQMa8MPxL signals are routed on 50 mil pin headers on the MBa8MPxL.

CPU features and interface can be evaluated, software development for a TQMa8MPxL-based project can start immediately. Currently four i.MX 8M Plus derivatives are supported:

- 1) i.MX 8M Plus Dual (Dual Cortex®-A53)
- 2) i.MX 8M Plus Quad 4 Lite (Quad Cortex®-A53)
- 3) i.MX 8M Plus Quad 6 Video (Quad Cortex®-A53)
- 4) i.MX 8M Plus Quad 8 ML/Al (Quad Cortex®-A53)

2.1 MBa8MPxL block diagram

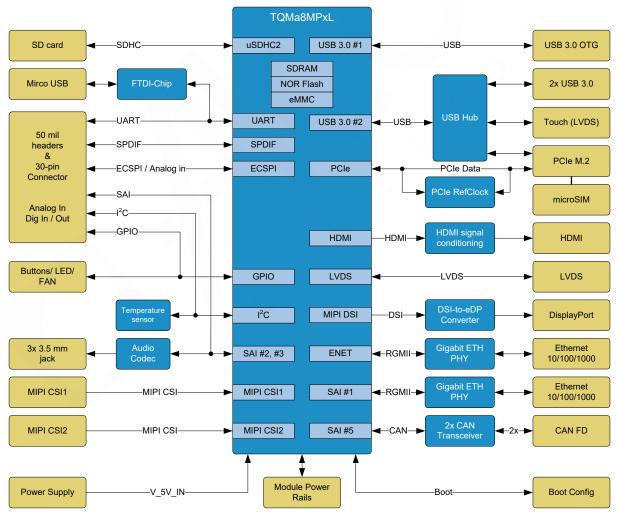


Figure 1: Block diagram MBa8MPxL



2.2 MBa8MPxL interfaces, overview

The following interfaces/functions and user interfaces are available on the MBa8MPxL:

Table 2: Data interfaces

Interface	Connector	Туре	Remark
Audio	X15, X16, X17	3 × 3.5 mm jack	MIC, Line-in, Line-out
CAN FD	X18, X19	MC 1,5/ 3-G-3,5	X18: CAN0 X19: CAN1
eDP / DP	X65	DisplayPort	DSI-to-DP bridge
Eth 1000 Base-T	X66	Double RJ45	Left RJ45: SAI1 Right RJ45: ENET
GPIO	X555	DMC 1,5/15-G1F-3,5-LR P20THR	Connected to IO bank, usage up to 24 V
HDMI	X44	HDMI	-
I ² C	X61	40-pin, 50 mil pin header	4 × I ² C
JTAG	X22	10-pin, 50 mil pin header	JTAG
LVDS CMD	X7	20-pin, DF19G	ZIF connector
LVDS Data	X11	30-pin, DF19G	ZIF connector
MIPI CSI	X57	60-pin, 0.8 mm, TE Connectivity	CSI1 and CSI2
PCle / M.2	X48	M.2	PCIe + USB 3.0
SIM card	X46	SIM card holder	SIM card slot
SD card	X42	uSDHC2	microSD card, optional boot source
USB 3.0	X36	Stacked Type A	USB 3.0 H1, top, USB 3.0 H2, bot
USB 3.0 OTG	X29	USB1-Interface at USB Micro-B	USB OTG or Serial Download Mode
USB Debug	X28	UART1UART4	3.3 V UART via FTDI chip at USB Micro-AB or pin header

The MBa8MPxL provides the following diagnostic and user interfaces:

Table 3: Diagnostic and user interfaces

Interface Reference		Component	Remark	
		1 × Red LED	Reset	
		7 × Green LED	Voltages on MBa8MPxL	
Status LEDs		2 × Green LED	General purpose LEDs	
	3 × Orange LED		V_3V3_MOD, V_3V3_SD, V_1V8_MOD	
		1 × Yellow LED	General purpose LED	
Temperature sensor D1		1 × SE97BTP	Digital I ² C temperature sensor	
Power / Reset S7		1 × Pushbutton	CPU-ON/OFF	
GP button S12, S13		2 × Pushbutton	General purpose pushbuttons	
Boot-Mode S1		1 × 4-fold DIP switch	Boot Device selection	
Coin cell X56		1 × battery socket	Standard CR2032, RTC buffer	



2.3 MBa8MPxL interfaces, location

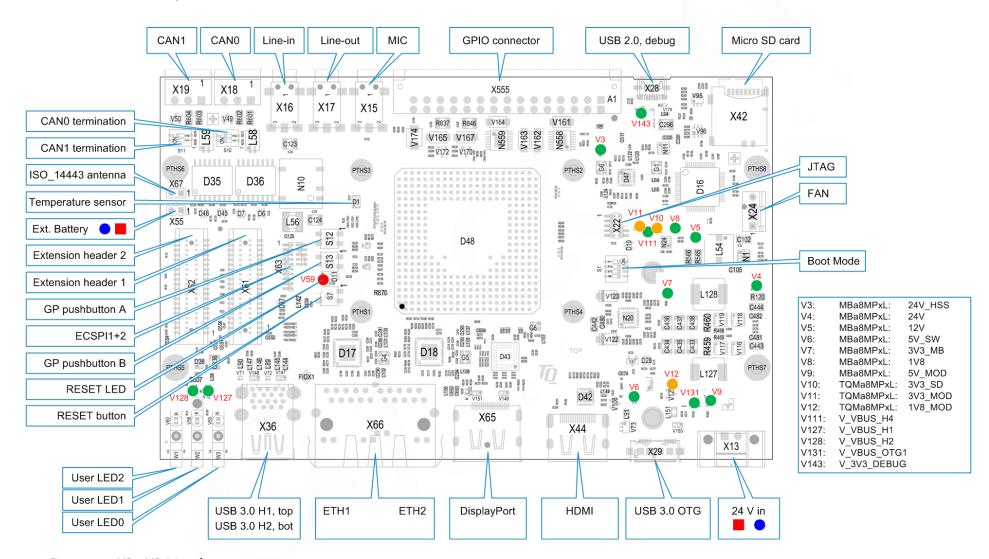


Figure 2: MBa8MPxL interfaces top



2.3 MBa8MPxL interfaces, (continued)

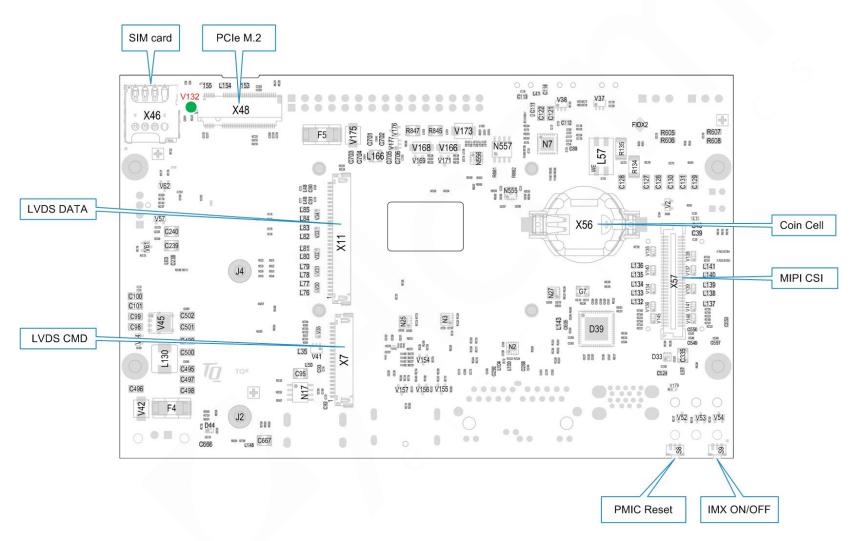


Figure 3: MBa8MPxL interfaces bottom



3. ELECTRONICS

3.1 MBa8MPxL functional groups

The following chapters describe the interfaces of the MBa8MPxL in connection with a TQMa8MPxL.

3.1.1 TQMa8MPxL overview

The MBa8MPxL provides all power supplies and configurations required for the operation of the TQMa8MPxL. The TQMa8MPxL is the central system on the MBa8MPxL. It provides LPDDR4 SDRAM, eMMC, NOR flash, RTC, an EEPROM, power supply and power management functionality. All TQMa8MPxL internal voltages are derived from the 5 V supply voltage. All functionally relevant pins of the i.MX 8M Plus are routed to the TQMa8MPxL connectors or LGA pads. This enables to use the TQMa8MPxL with all the freedom that comes with a customer-specific design-in solution. Further information can be found in the TQMa8MPxL User's Manual.

On the MBa8MPxL the standard interfaces like USB, Ethernet, etc., provided by the TQMa8MPxL are routed to industry standard connectors. All other relevant signals and buses provided by the TQMa8MPxL are routed to 50 mil pin headers on the MBa8MPxL. The boot behaviour of the TQMa8MPxL can be controlled. The boot mode configuration is set with a DIP switch on the MBa8MPxL.

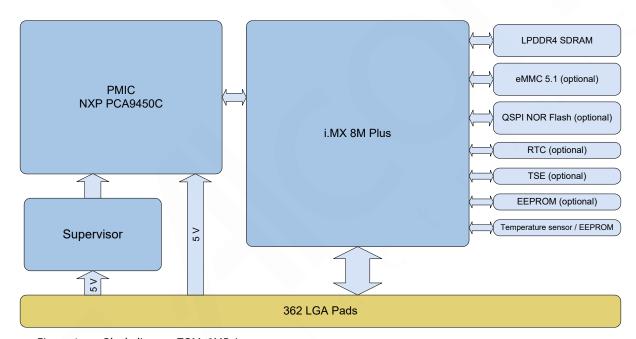


Figure 4: Block diagram TQMa8MPxL

3.1.2 TQMa8MPxL pinout

All relevant TQMa8MPxL signals are routed to 50 mil pin headers on the MBa8MPxL.

Note: Available interfaces



Depending on the TQMa8MPxL derivative, not all interfaces are available. More information about available interfaces can be found in the TQMa8MPxL User's Manual and pinout tables.



3.1.3 I²C devices, address mapping

The TQMa8MPxL provides four I^2C buses. The buses operate at 3.3 V and are available at pin header X61 on the MBa8MPxL. All four I^2C buses are equipped with 4.7 k Ω PU's to 3.3 V. The maximum operation frequency of the I^2C buses is 100 kHz. The following block diagram shows the I^2C bus structure.

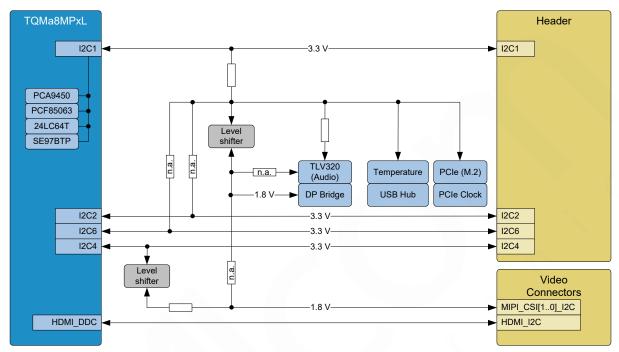


Figure 5: Block diagram I²C bus

The following table shows the addresses used on the TQMa8MPxL and the MBa8MPxL.

Table 4: I²C devices, address mapping on TQMa8MPxL and MBa8MPxL

Location	Device	Function	7-bit address	Remark
	PCA9450	System Controller	0x25 / 010 0101b	Should not be altered
	PCF85063A	RTC	0x51 / 101 0001b	Optional
	M24LC64	EEPROM	0x57 / 101 0111b	Optional
TQMa8MPxL		Temperature sensor	0x1B / 001 1011b	-
	SE97BTP	EEPROM	0x33 / 011 0011b	R/W access in Protected Mode
		EEPROIN	0x53 / 101 0011b	R/W access in Normal Mode
	SE050	Trust Secure Element	0x48 / 100 1000b	Optional
	TLV320AIC3204	Audio Codec	0x18 / 001 1000b	N7
		Temperature sensor	0x1C / 001 1100b	D1
	SE97BTP	EEPROM	0x34 / 011 0100b	D1, R/W access in Protected Mode
MDagMDyl		EEPROIN	0x54 / 101 0100b	D1, R/W access in Normal Mode
MBa8MPxL	TUSB8041	USB 3.0 Hub	0x44 / 100 0100b	D39
	9FGV0441A	Clock Generator	0x6A / 110 1010b	D47
	TC9595XBG	MIPI DSI to DP	0x0F / 000 1111b	D43
	Socket	PCle M.2	(Device dependent)	X48



3.1.4 RTC backup

In case of power failure or power down, a lithium battery type CR2032 on the MBa8MPxL supplies the RTC on the TQMa8MPxL, which can be supplied with 2.1 V to 3.7 V, typical 3.0 V. The TQMa8MPxL features an i.MX 8M Plus-internal RTC or a discrete RTC PCF85063A. The RTC is supplied in either way.

3.1.5 Temperature sensor

For temperature monitoring on the TQMa8MPxL and the MBa8MPxL, there is one SE97BTP sensor each.

The sensors are connected to I2C1; see Table 4. The I²C address of the sensor on the MBa8MPxL can be adapted by rearranging 0 Ω bridges. When changing the address, care must be taken to avoid address conflicts with existing I²C devices.

The assembly options are documented in the MBa8MPxL schematics.

The temperature sensor D1 is located on the top side of the MBa8MPxL; see Figure 2.

Table 5: Temperature sensor SE97BTP, D1

Manufacturer	Device	Resolution	Accuracy	Temperature range
	SE97BTP	11 bits	Max. ±1 °C	+75 °C to +95 °C
NXP			Max. ±2 °C	+40 °C to +125 °C
			Max. ±3 °C	−40 °C to +125 °C

3.1.6 Fan

To cool the TQMa8MPxL, a fan can be connected on the MBa8MPxL.

The signal FAN-PWR for the fan is available at pin header X62-30 and can be switched with 1.8 V or 3.3 V.

Table 6: Pinout fan connector, X24

Pin	Signal Remark	
1	DGND	-
2	V_FAN	12 V via R249 on MBa8MPxL (default), optional 5 V via R250 on MBa8MPxL
3	RPM	GPT2_CLK of TQMa8MPxL, 3.3 V
4	PWM	PWM3 of TQMa8MPxL, 3.3 V



3.1.7 Reset

The RESET_OUT# signal of the TQMa8MPxL is available on the MBa8MPxL.

A red LED (V59) on the MBa8MPxL indicates a reset condition; see Table 26.

On the MBa8MPxL a partial reset of the TQMa8MPxL is possible, e.g. with signals PMIC_WDOG_IN# and RESET_IN#.

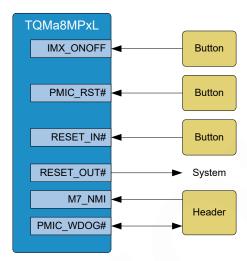


Figure 6: Block diagram MBa8MPxL Reset structure

Attention: RESET_OUT# / PMIC_RST#



Attention: The signal RESET_OUT# is designed as a reset triggering signal. To feed a reset signal into the system, it is mandatory to use the signal PMIC_RST#.

Table 7: Reset signals

Signal	Dir.	Source	Default	Remark
RESET_OUT#	0	TQMa8MPxL	High	 Open drain output; low-active Activates RESET of MBa8MPxL components Requires pull-up on carrier board (max. 6.5 V)
RESET_3V3#	0	MBa8MPxL	High	Generated on MBa8MPxL from RESET_OUT#
IMX_ONOFF	ı	MBa8MPxL	High	 ON/OFF function; see i.MX 8M Plus data sheet (1) No pull-up on carrier board required; low-active
PMIC_RST#	ı	MBa8MPxL	High	No pull-up on carrier board required; low-activeProgrammable PMIC response (warm reset, cold reset)
RESET_IN#	ı	MBa8MPxL	High	 Activates POR_B of the i.MX 8M Plus; low-active Pull-up to 3.3 V on carrier board
M7_NMI	ı	MBa8MPxL	_	Multiplexed to GPIO1_IO05 pin of i.MX 8M PlusInterrupt signal for M7 Sub-CPU with defined priority
PMIC_WDOG_IN#	I	MBa8MPxL	High	 No pull-up on carrier board required; low-active Disabled by default on PMIC side Programmable PMIC response (warm reset, cold reset)
PMIC_WDOG_OUT#	0	TQMa8MPxL	_	 Multiplexed to GPIO1_IO02 pin of i.MX 8M Plus Connected to PMIC_WDOG_IN# via 0 Ω bridge



3.2 Power supply

At X13, the MBa8MPxL has to be supplied with 24 V + 10 % / -33 % (16 V to 26.4 V).

All other voltages required on the MBa8MPxL are derived from the supply voltage.

Under full load of the TQMa8MPxL and with full load at all pin headers and slots, the MBa8MPxL including TQMa8MPxL may consume significantly more power. The power supply for a carrier board must be dimensioned accordingly.

The MBa8MPxL including TQMa8MPxL consumes approx. 5 to 6 watts when the i.MX 8M Plus operates at 100 % load.

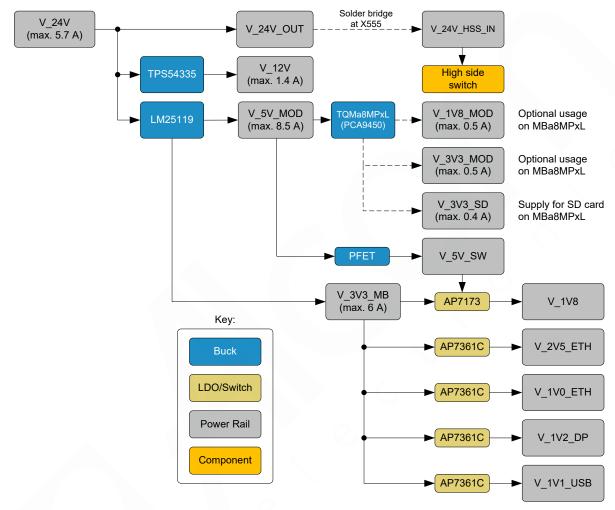


Figure 7: Block diagram power supply MBa8MPxL

3.2.1 Protective circuitry

The protective circuit (see Figure 8) features the following characteristics:

- Overcurrent protection by fuse 7 A, Slow Blow
- Overvoltage protection
- PI filter
- Reverse polarity protection
- Capacitors for voltage smoothing



Figure 8: MBa8MPxL protective circuit



3.3 Communication interfaces

3.3.1 Ethernet 1000 Base-T (RGMII)

Both TQMa8MPxL Ethernet MACs are configured as RGMII and are connected to TI PHYs DP83867 on the MBa8MPxL.

The RGMII interface includes PHY reset and interrupt signals. The PHY DP83867 provides boot straps to start with configurable default values. All boot straps can be customized on the MBa8MPxL by assembly options. Further information can be found in the MBa8MPxL schematics.

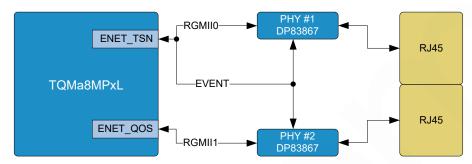


Figure 9: Block diagram Ethernet 1000 Base-T

Table 8: Pinout RJ45 Ethernet connector, X66

X66, left RJ45				X66, right RJ4	Dawa anda	
Pin	Pin name	Signal	Pin	Pin name	Signal	Remark
1A	GND	GND	1B	GND	GND	-
2A	TD0+	ENETO_A+	2B	TD0+	ENET1_A+	-
3A	TD0-	ENETO_A-	3B	TD0-	ENET1_A-	-
6A	TD1+	ENETO_B+	6B	TD1+	ENET1_B+	-
4A	TD1-	ENETO_B-	4B	TD1-	ENET1_B-	-
5A	TD2+	ENETO_C+	5B	TD2+	ENET1_C+	-
7A	TD2-	ENETO_C-	7B	TD2-	ENET1_C-	-
8A	TD3+	ENET0_D+	8B	TD3+	ENET1_D+	-
9A	TD4-	ENETO_D-	9B	TD4-	ENET1_D-	-
10A	CHS.GND	GND	10B	CHS.GND	GND	-
11A	GREEN_ANODE	V_3V3_MB	11B	GREEN_ANODE	V_3V3_MB	120 Ω in series
12A	GREEN_CATHODE	ENETO_LED_0	12B	GREEN_CATHODE	ENET1_LED_0	Switched by transistor
13A	YELLOW_ANODE	V_3V3_MB	13B	YELLOW_ANODE	V_3V3_MB	120 Ω in series
14A	YELLOW_CATHODE	ENETO_LED_2	14B	YELLOW_CATHODE	ENET1_LED_2	Switched by transistor



3.3.2 SD card interface

The MBa8MPxL offers a microSD card slot that can also be used as boot source. All signals are directly connected to the USDHC2 interface of the i.MX 8M Plus.

The TQMa8MPxL voltage V_3V3_SD supplies the microSD card slot. Since this voltage is controlled by SD_RESET#, the microSD card is automatically reset in case of a Reset. An external switch is not required. Signal USDHC2_CD# has a pull-up on the MBa8MPxL. All data lines are ESD protected.

Standard, High and Extended capacity card types are supported. Default Speed, High Speed, and SD UHS-1 Speed Mode SDR104 with theoretically max.104 MB/s are supported. UHS-1 Speed Modes SDR12, SDR25, SDR50 and DDR50 are theoretically supported but not verified.

The TQMa8MPxL sets USDHC2 is to 1.8 V or 3.3 V automatically, depending on the transfer mode.

The corresponding driver handles the changeover; it does not have to be done explicitly.

USDHC2_WP is not used and is terminated accordingly.

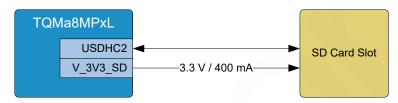


Figure 10: Block diagram SD card interface, MBa8MPxL

Table 9: Pinout microSD card, X42

Pin	Pin name	Signal	Remark
1	DAT2	USDHC2_DATA2	10 kΩ PU, (NP)
2	DAT3	USDHC2_DATA3	10 kΩ PU, (NP)
3	CMD	USDHC2_CMD	10 kΩ PU
4	VDD	V_3V3_SD	Supply from TQMa8MPxL
5	CLK	USDHC2_CLK	-
6	GND	GND	-
7	DAT0	USDHC2_DATA0	10 kΩ PU, (NP)
8	DAT1	USDHC2_DATA1	10 kΩ PU, (NP)
SW1	CD#	GND	-
SW2	CD#	USDHC2_CD#	10 kΩ PU



3.3.3 USB 3.0 Hub

A USB 3.0 hub TUSB8041 is connected to the USB2 interface on the MBa8MPxL, which provides four USB 3.0 / 2.0 host interfaces. The USB connectors are supplied with 5 V via power switches. The current is monitored and can be switched off in case of an overload and/or overheating.

USB Host 1 & 2 of the TUSB8041 are connected to a Dual USB 3.0 Type A socket (X36) on the MBa8MPxL.

USB Host 3 is routed to the PCle M.2 connector X48, USB Host 4 is routed to the LVDS-CMD connector X7 on the MBa8MPxL.

The USB2 port of the TQMa8MPxL provides a theoretical data rate of 5 Gbit/s. This is divided among the connected ports. Depending on the software and hardware used, the effective read and write rates of the ports may vary.

The USB hub is programmed via bootstrapping or I^2C . Further information can be found in the TUSB8041 data sheet and the MBa8MPxL schematics.

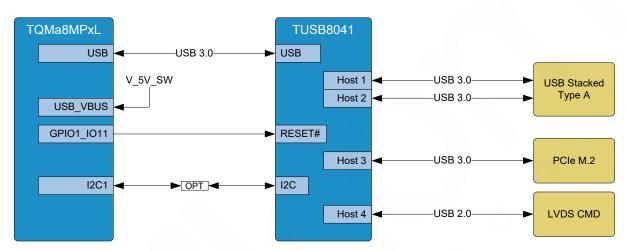


Figure 11: Block diagram USB 3.0 Hub

3.3.4 USB 3.0 OTG

The second TQMa8MPxL USB interface is configured as USB 3.0 OTG and routed to USB Micro-B connector X29 on the MBa8MPxL. This interface can be used for the Serial Download Mode of the TQMa8MPxL.

The USB connector is supplied with 5 V via a power switch. The current is monitored and can be switched off in case of an overload and/or overheating.

The USB1 port of the TQMa8MPxL provides a theoretical data rate of 5 Gbit/s.

Depending on the software and hardware used, the effective read and write rates of the ports may vary.

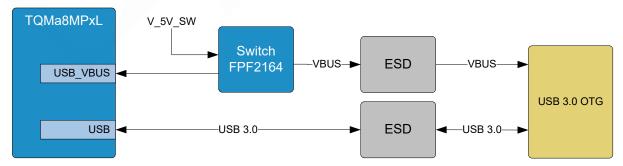


Figure 12: Block diagram USB 3.0 OTG



3.3.5 PCle M.2

The TQMa8MPxL offers a PCle Gen3 interface with one lane (\times 1). The interface is routed to an M.2 slot on the MBa8MPxL, which supports all standard compliant M.2 cards with B key and sizes of 2230 or 2280.

The interface complies with the PCI Express Base Specification, Revision 3.0. Data rates of 2.5 GT/s and 5 GT/s are supported. The PCIe M.2 interface is supplied with the required clock by a clock generator 9FGB0441.

A SIM card holder is also provided. SIM cards that require 5 V supply are not supported.

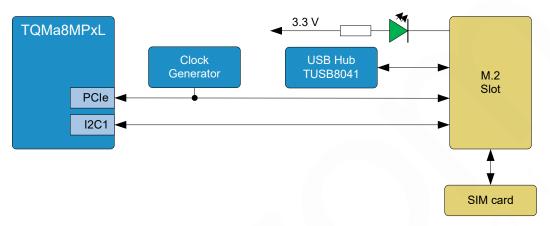


Figure 13: Block diagram PCle M.2

Table 10: Pinout SIM card, X46

Pin	Signal SIM card	Signal and pin on M.2
C1	V_SIM_PWR	UIM_PWR, X48-36
C2	SIM_RST	UIM_RESET, X48-30
C3	SIM_CLK	UIM_CLK, X48-32
C4	(NC)	-
C5	GND	-
C6	(NC)	-
C7	SIM_DATA	UIM_DATA, X48-34
C8	(NC)	-
DC	SIM_DETECT	SIM_DETECT, X48-66
DS	GND	-



3.3.5 PCle M.2 (continued)

Table 11: Pinout M.2, B key, X48

Signal	P	in	Signal
CONFIG_3	1		-
GND	3	2	3V3
GND	5	4	3V3
USB_D+	7	6	FULL_CARD_POWER_OFF#
USB_D-	9	- 8	W_DISABLE
GND	11	10	GPIO_9 / DAS / DSS# / LED1#
GND	B key	B key	
	B key	B key	
	B key	B key	
		B key	
CONFIC O	B key	20	GPIO_5
CONFIG_0	21	- 22	GPIO_6
GPIO_11	23	24	GPIO_7
DPR	25	26	GPIO_10
GND	27	28	GPIO_8
PER-1 / USB3.0_Rx- / SSIC_Rx-	29	30	UIM_RESET
PER+1 / USB3.0_Rx+ / SSIC_Rx+	31	- 32	UIM_CLK
GND	33	- 34	UIM_DATA
PET-1 / USB3.0_Tx- / SSIC_Tx-	35	36	UIM_PWR
PET+1 / USB3.0_Tx+ / SSIC_Tx+	37	- 38	DEVSLP
GND	39	40	GPIO_0
PER-0 / SATA_B+	41	42	GPIO_1
PER+0 / SATA_B-	43	44	GPIO_2
GND	45	46	GPIO_3
PET-0 / SATA_A-	47	48	GPIO_4
PET+0 / SATA_A+	49	50	PERST#
GND	51	- 52	CLKREQ#
REFCLK-	53	- 54	PEWAKE#
REFCLK+	55	56	(NC)
GND	57	58	(NC)
ANTCTL_0	59	60	COEX_3
ANTCTL_1	61	62	COEX_2
ANTCTL_2	63	64	COEX_1
ANTCTL_3	65	66	SIM_DETECT
RESET#	67	68	SUSCLK
CONFIG_1	69		3V3
GND	71	70	
GND	73	72	3V3
CONFIG_2	75	74	3V3



3.3.6 Debug UART

The TQMa8MPxL provides four UARTs. UART3 and UART4 can be used as virtual COM port through USB for debug purposes. All four UARTs are also routed to pin header X61.

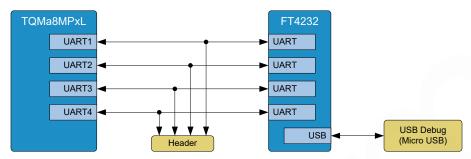


Figure 14: Block diagram UARTs

The pinout of all UARTs is shown in Table 22, Pinout header X61.



3.3.7 MIPI DSI / DisplayPort

The TQMa8MPxL MIPI DSI interface, consisting of a differential clock signal and four differential data lines, is routed on the MBa8MPxL to DisplayPort connector X65 via a Toshiba TC9595XBG DSI-to-DisplayPort bridge.

The bridge supports DisplayPort 1.1a standard and thus resolutions of 1920x1200 at 60 FPS.

3.3 V is available at the DisplayPort connector, which can supply a maximum of 500 mA.

The TC9595's reference clock is generated by a 26 MHz oscillator.

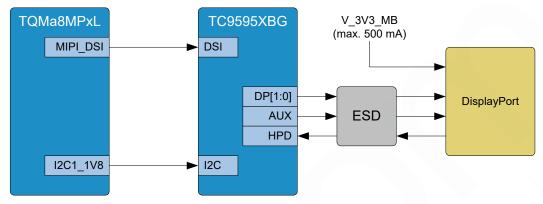


Figure 15: Block diagram DisplayPort

Table 12: Pinout DisplayPort, X65

	Tillout Display! Ort, 703	
Pin	Signal	Remark
1	DP_ML0+	-
2	DGND	-
3	DP_ML0-	-
4	DP_ML1+	- //
5	DGND	-
6	DP_ML1-	- (6)
7	(NC)	-
8	DGND	- \
9	(NC)	-
10	(NC)	-
11	DGND	-
12	(NC)	-
13	DP_CFG1	1 MΩ PD
14	DP_CFG2	0 Ω PD
15	DP_AUX_CH+	100 kΩ PD
16	DGND	-
17	DP_AUX_CH-	100 kΩ PU to 3.3 V
18	DP_HPD	GPIO0 at DP bridge
19	DGND	-
20	V_3V3_DP	Max. 500 mA



3.3.8 MIPI CSI

Both MIPI CSI interfaces provided by the TQMa8MPxL are routed to connector X57 on the bottom of the MBa8MPxL.

With a single camera, up to 4k at 45 FPS are supported, with two cameras two times 1080p at 80 FPS are supported.

Both CSI interfaces provide an I^2C bus, four GPIO signals (reset, power enable, trigger, sync) and a master clock output on the connector. The GPIO signals are connected as ECSPI interfaces. In case ECSPI is used at the connectors, the GPIO signals must be disconnected by removing the $0\,\Omega$ bridges from the CSI connector.

The I^2C buses operate at 1.8 V and are connected to I2C4 via a level shifter on the MBa8MPxL. CSI0 can optionally be connected to another I^2C bus.

The master clock signals can be connected to the Clock Control Module of the i.MX 8M Plus. Via this Clock Control Module both CSIs can be supplied with a reference clock each. The 0 Ω bridge for the connection is not assembled by default.

5 V are provided at pins 56, 58 and 60. This voltage may be loaded with a maximum of 300 mA.

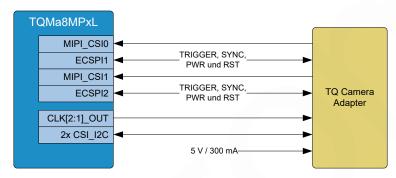


Figure 16: Block diagram MIPI CSI

Table 13: Pinout MIPI CSI, X57

Remark	Signal	Pi	in	Signal	Remark
_	GND	1	2	GND	_
10 kΩ PD	MIPI_CSI0_EN	3	4	MIPI_CSI1_EN	10 kΩ PD
10 kΩ PD	MIPI_CSIO_RST#	5	6	MIPI_CSI1_RST#	10 kΩ PD
_	MIPI_CSI0_TRIGGER	7	8	MIPI_CSI1_TRIGGER	_
_	MIPI_CSI0_SYNC	9	10	MIPI_CSI1_SYNC	_
_	(NC)	11	12	(NC)	_
_	GND	13	14	GND	_
-	MIPI_CSI0_DATA[3]_N	15	16	MIPI_CSI1_DATA[3]_N	_
_	MIPI_CSI0_DATA[3]_P	17	18	MIPI_CSI1_DATA[3]_P	_
-	GND	19	20	GND	_
/// -	MIPI_CSI0_DATA[2]_N	21	22	MIPI_CSI1_DATA[2]_N	_
	MIPI_CSI0_DATA[2]_P	23	24	MIPI_CSI1_DATA[2]_P	_
-	GND	25	26	GND	_
_	MIPI_CSI0_DATA[1]_N	27	28	MIPI_CSI1_DATA[1]_N	_
_	MIPI_CSI0_DATA[1]_P	29	30	MIPI_CSI1_DATA[1]_P	_
	GND	31	32	GND	_
_	MIPI_CSI0_DATA[0]_N	33	34	MIPI_CSI1_DATA[0]_N	_
_	MIPI_CSI0_DATA[0]_P	35	36	MIPI_CSI1_DATA[0]_P	_
_	GND	37	38	GND	_
_	MIPI_CSI0_CLK_N	39	40	MIPI_CSI1_CLK_N	_
_	MIPI_CSI0_CLK_P	41	42	MIPI_CSI1_CLK_P	_
_	GND	43	44	GND	_
Optional I2C_SDA_1V8	MIPI_CSI0_SDA	45	46	MIPI_CSI1_SDA	_
Optional I2C_SCL_1V8	MIPI_CSI0_SCL	47	48	MIPI_CSI1_SCL	_
_	GND	49	50	GND	_
0 Ω in series; (NP)	MIPI_CSI0_MCLK_OUT	51	52	MIPI_CSI1_MCLK_OUT	Routed to TP243
_	GND	53	54	GND	_
_	(NC)	55	56		
_	(NC)	57	58	V_5V_SW	Max. 300 mA
_	(NC)	59	60		



3.3.9 LVDS

The i.MX 8M Plus offers an LVDS controller with a dual LVDS interface. Each of the interfaces uses four differential lanes. On the MBa8MPxL there is one interface for connecting single or dual LVDS. In addition, two GPIO (BLT_EN, RESET#), a PWR_EN and a PWM signal are provided. GPIO3_IO14, GPIO3_IO19, GPIO3_IO20 and GPIO3_IO21 are used for these four 1.8 V signals. If required, the signal PWM2 can be multiplexed on the same CPU pin instead of GPIO3_IO21. Both DF19 LVDS connectors - Data and CMD - are placed on the bottom side of the MBa8MPxL. The USB signals of the CMD connector are connected to port 4 of the USB 3.0 hub.

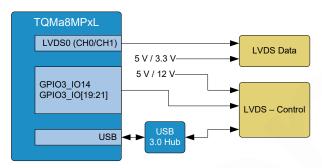


Figure 17: Block diagram LVDS

Table 14: Pinout LVDS data, X11

I able 1	4: Pinout LVDS data, XTT
Pin	Signal
1	LVDS0_CH0_TX0_N
2	LVDS0_CH0_TX0_P
3	LVDS0_CH0_TX1_N
4	LVDS0_CH0_TX1_P
5	LVDS0_CH0_TX2_N
6	LVDS0_CH0_TX2_P
7	GND
8	LVDS0_CH0_CLOCK_N
9	LVDS0_CH0_CLOCK_P
10	LVDS0_CH0_TX3_N
11	LVDS0_CH0_TX3_P
12	LVDS0_CH1_TX0_N
13	LVDS0_CH1_TX0_P
14	GND
15	LVDS0_CH1_TX1_N
16	LVDS0_CH1_TX1_P
17	GND
18	LVDS0_CH1_TX2_N
19	LVDS0_CH1_TX2_P
20	LVDS0_CH1_CLOCK_N
21	LVDS0_CH1_CLOCK_P
22	LVDS0_CH1_TX3_N
23	LVDS0_CH1_TX3_P
24	GND
25	
26	V_5V_LVDS0
27	
28	
29	V_3V3_LVDS0
30	

Table 15: Pinout LVDS control, X7

Pin	Signal	
1		
2	12 V	
3		
4		
5	DGND	
6		
7	5 V	
8	3 V	
9	DGND	
10	DGIND	
11	V_VBUS30_H4	
12	DGND	
13	USB30_H4_DN	
14	USB30_H4_DP	
15	DGND	
16	LVDS0_RESET#, 10 kΩ PD	
17	LVDS0_BLT_EN, 10 kΩ PD	
18	LVDS0_PWR_EN, 10 kΩ PD	
19	LVDS0_PWM (LCD_CONTRAST)	
20	DGND	



3.3.10 HDMI

The HDMI_TX interface of the TQMa8MPxL is provided on the MBa8MPxL on an HDMI connector. Between TQMa8MPxL and HDMI socket is a "HDMI signal conditioning chip", which converts the levels and provides ESD protection.

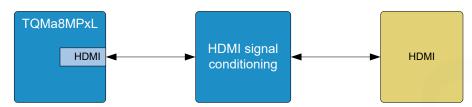


Figure 18: Block diagram HDMI

Table 16: Pinout HDMI connector, X44

Table 10.	Tillout Tibivii conflector, A44	
Pin	Signal	Remark
1	HDMI_D2+	-
2	GND	-
3	HDMI_D2-	- 🗸
4	HDMI_D1+	-
5	GND	-
6	HDMI_D1-	-
7	HDMI_D0+	-
8	GND	-
9	HDMI_D0-	-
10	HDMI_CLK+	-
11	GND	-
12	HDMI_CLK-	-
13	HDMI_CEC	- 0,
14	HDMI_HEAC+	-
15	HDMI_SCL	1.87 kΩ PU to 5V_OUT
16	HDMI_SDA	1.87 kΩ PU to 5V_OUT
17	GND	-
18	HDMI_5V_OUT	-
19	HDMI_HEAC-	-



3.3.11 CAN FD

The CAN ports of the TQMa8MPxL are available on the MBa8MPxL via level converters on the 3-pin connectors X18 and X19. Both interfaces are galvanically isolated with 1 kV. The CAN interfaces are not galvanically isolated from each other. Both CAN interfaces can each be terminated with a DIP switch.

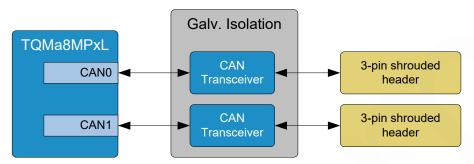


Figure 19: Block diagram CAN FD interface

Table 17: Pinout CAN FD connectors, X18, X19

Interface	Tub connector	Signal	Remark
	X18-1	CAN0_H	Galvanically isolated
CAN0	X18-2	CAN0_L	Galvanically isolated
	X18-3	GND_CAN	GND galvanically isolated
	X19-1	CAN0_H	Galvanically isolated
CAN1	X19-2	CAN0_L	Galvanically isolated
	X19-3	GND_CAN	GND galvanically isolated



3.3.12 Audio

A Texas Instruments TLV320 audio codec is assembled. It is configured via SAI2 and controlled by the I2C2 bus.

The audio codec provides microphone, line in and line out signals at 3.5 mm jacks on the MBa8MPxL.

The supply voltage, signal level and communication signals operate at 3.3 V, but can be set to 1.8 V via placement option. All jack sockets are ESD protected.

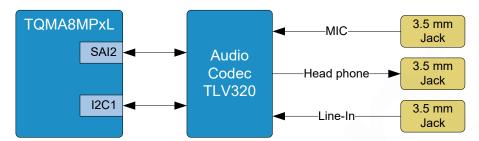


Figure 20: Block diagram audio interface

Table 18: Pinout audio connectors, X15, X16, X17

Jack	Pin	Signal	Remark
	1, 2	AGND_AUDIO	-
X15 MIC	4A, 4B	MIC_IN	2.4 kΩ in series to MIC_BIAS; ESD protection
	3	AGND_AUDIO	Right channel not used
	1, 2	AGND_AUDIO	-
X16 Line-In	4A, 4B	LINE_IN_L	ESD protection
Zille iil	3	LINE_IN_R	ESD protection
	1, 2	AGND_AUDIO	-
X17 Line-Out	4A, 4B	AUDIO_OUT_L	ESD protection. Optional connection to HP_L
Line out	3	AUDIO_OUT_R	ESD protection. Optional connection to HP_R



3.3.13 ECSPI

Up to three ECSPI interfaces are provided by the i.MX 8M Plus. These can be used on the MBa8MPxL for different interfaces. ECSPI3 is used for the ADC of the IO extension; see chapter 3.3.19. ECSPI1 and ECSPI2 are connected to pin headers as well as via 0 Ω bridges to the MIPI CSI connector. There they are used as GPIO control signals.

3.3.14 SPDIF

The SPDIF interface is not used on the MBa8MPxL and directly connected to the pin headers without further circuitry. If the SPDIF interface is not needed, the three signals can be configured as GPIO and connected via $0\,\Omega$ bridges to the transistors controlling the user LEDs; see chapter 3.4.4.

3.3.15 GPT

The i.MX 8M Plus provides up to three general purpose timers. Signal GPT2_CLK is used to determine the fan speed. Signals GPT1_CLK and GPT1_CPTR2 are routed to pin headers. If they are not needed at the pin headers, the two pushbuttons Switch_A# and Switch_B# can be connected to these signals via $0\,\Omega$ bridges; see chapter 3.4.2. All three signals use I^2C or UART pins of the i.MX 8M Plus and have 3.3 V level.

3.3.16 PWM

The TQMa8MPxL provides two PWM signals, of which PWM3 is used to control the fan speed; see chapter 3.1.6. PWM4 is connected to a pin header and operates at the voltage level set by V_SAI2_SAI3, 3.3 V by default.

3.3.17 CCM

CLK1_IN, CLK2_IN and CLK2_OUT of the Clock Control Module are routed on pin headers. CLK1_OUT can be used as clock supply for the MIPI CSI interface. The $0~\Omega$ bridge required for this is not equipped by default. All signals operate at 1.8 V.

3.3.18 TSE chip

For TQMa8MPxL variants with TSE chip, the corresponding circuitry is available for the pins used.

- The ISO 14443 interface is connected to a pin header where an antenna can be connected. If this TSE chip interface is not used, the signals are terminated with pull-down resistors.
- The ISO 7816 interface of the TSE chip is routed to a pin header; see chapter 3.3.20. If this TSE chip interface is not used, the signals are terminated according to the data sheet.



3.3.19 IO extension

 $The TQMa8MPxL\ provides\ eight\ GPIO1\ interface\ pins\ as\ four\ outputs\ and\ four\ inputs\ at\ an\ IO\ connector\ on\ the\ MBa8MPxL.$

All signals can operate at up to 24 V. The corresponding circuitry is provided on the MBa8MPxL.

The high-side switches, which supply the output signals, must be supplied with 24 V (max. 2 A) at pins B3 and B4.

The supply voltage of 24 V provided at pins B1 and B2 can be used for this purpose.

Analog voltages are AD converted and transmitted to the ECSPI3 interface of the TQMa8MPxL.

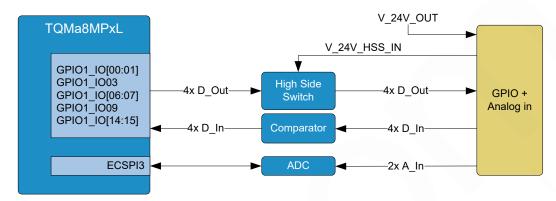


Figure 21: Block diagram IO extension

Table 19: Pinout IO extension connector, X555

Pin	Pin Name	Signal	Remark
B1	V 24V OUT	V 24V OUT	Loop through supply valtage V 24V IN
B2	V_24V_OUT	V_24V_OUT	Loop-through supply voltage V_24V_IN
В3	V 24V LICE IN	V 24V LICC IN	Voltage graph for high side quitales (241)
B4	V_24V_HSS_IN	V_24V_HSS_IN	Voltage supply for high-side switches (24 V)
B5	GND	GND	-
B6	D_OUT2	GPIO1_IO01	
В7	D_OUT1	GPIO1_IO00	
B8	D_OUT4	GPIO1_IO06	
В9	D_OUT3	GPIO1_IO03	
B10	D_IN1	GPIO1_IO07	0+2.24/
B11	D_IN2	GPIO1_IO09	0 to 24V
B12	D_IN3	GPIO1_IO14	
B13	D_IN4	GPIO1_IO15	
B14	ADC_IN1	ECSPI3	
B15	ADC_IN2	ECSPI3	
A1A15	GND	GND	-



3.3.20 Pin header

The MBa8MPxL features three pin headers. All signals, which are not used on the MBa8MPxL are routed on these pin headers. Most of these signals can be configured as GPIO. 1.8 V, 3.3 V, and 5 V are available on each pin header.

Attention: Maximum current of 1.8 V, 3.3 V, and 5 V rails



The currents load of the 1.8V, 3.3 V and 5 V rails add up to the current consumption of the MBa8MPxL. The additional power required must be provided by the power supply of the MBa8MPxL. The maximum load of the fuse must be observed.

The maximum current load of the three voltage rails can be taken from the following table.

Table 20: Current load at pin headers

Voltage	I _{max}	Remark
1.8 V	0.75 A	Sum of currents at X61, X62, and X63
3.3 V	1.75 A	Sum of currents at X11, X61, X62, and X63
5 V	2.2 A	Sum of currents at X7, X11, X61, X62, and X63

Signals with IO functionality are listed in the following table.

All complete listing of all available signals can be found in Table 22 to Table 24.

Table 21: Signals with IO functionality

CPU pin name	Signal	Header-Pin	Alternative	Power group
ECSPI1_CS0	ECSPI1_CS0	X63-8	Optional GPIO5_IO09 or MIPI_CSI0_EN	
ECSPI1_MISO	ECSPI1_MISO	X63-10	Optional GPIO5_IO08 or MIPI_CSI0_TRIGGER	
ECSPI1_MOSI	ECSPI1_MOSI	X63-12	Optional GPIO5_IO07 or MIPI_CSI0_SYNC	
ECSPI1_SCLK	ECSPI1_SCLK	X63-14	Optional GPIO5_IO06 or MIPI_CSI0_RST#	1.0.1/
ECSPI2_CS0	ECSPI2_CS0	X63-7	Optional GPIO5_IO13 or MIPI_CSI1_EN	1.8 V
ECSPI2_MISO	ECSPI2_MISO	X63-9	Optional GPIO5_IO12 or MIPI_CSI1_TRIGGER	
ECSPI2_MOSI	ECSPI2_MOSI	X63-11	Optional GPIO5_IO11 or MIPI_CSI1_SYNC	
ECSPI2_SCLK	ECSPI2_SCLK	X63-13	Optional GPIO5_IO10 or MIPI_CSI0_RST#	
SAI2_MCLK	SAI2_MCLK	X62-17	Optional GPIO4_IO27 or signal at Audio Codec	
SAI2_RXC	SAI2_RXC	X62-11	Optional GPIO4_IO22	
SAI2_RXD0	SAI2_RXD0	X62-13	Optional GPIO4_IO23 or signal at Audio Codec	
SAI3_RXFS	SAI2_RXD1	X62-21	Optional GPIO4_IO28	
SAI3_RXC	SAI2_RXD2	X62-23	Optional GPIO4_IO29	
SAI3_RXD	SAI2_RXD3	X62-25	Optional GPIO4_IO30	
SAI2_RXFS	SAI2_RXFS	X62-9	Optional GPIO4_IO21	
SAI2_TXC	SAI2_TXC	X62-7	Optional GPIO4_IO25 or signal at Audio Codec	V CAID CAID
SAI2_TXD0	SAI2_TXD0	X62-3	Optional GPIO4_IO26 or signal at Audio Codec	V_SAI2_SAI3
SAI3_TXFS	SAI2_TXD1	X62-27	Optional GPIO4_IO31	
SAI3_TXC	SAI2_TXD2	X62-29	Optional GPIO5_IO00	
SAI3_TXD	SAI2_TXD3	X62-31	Optional GPIO5_IO01	
SAI2_TXFS	SAI2_TXFS	X62-5	Optional GPIO4_IO24 or signal at Audio Codec	
SPDIF_EXT_CLK	SPDIF_EXT_CLK	X62-35	Optional GPIO5_IO05	
SPDIF_RX	SPDIF_IN	X62-37	Optional GPIO5_IO04	
SPDIF_TX	SPDIF_OUT	X62-39	Optional GPIO5_IO03	



3.3.20 Pin header (continued)

Table 22: Pinout header X61

Dir.	Level	Group	Signal	Pin	Pin	Signal	Group	Level	Dir.
0	5 V	Power	V_5V_SW	1	2	V_1V8	Power	1.8 V	0
I	1.8 V	CCM	CLK1_IN	3	4	V_3V3_MB	Power	3.3 V	0
I	1.8 V	CCM	CLK2_IN	5	6	GND	Power	Ground	_
0	1.8 V	CCM	CLK2_OUT	7	8	I2C1_SDA	I2C_UART	3.3 V	I/O
-	Ground	Power	GND	9	10	I2C1_SCL	I2C_UART	3.3 V	0
- 1	3.3 V	SD	UART1_RX	11	12	GND	Power	Ground	-
0	3.3 V	SD	UART1_TX	13	14	I2C2_SDA	I2C_UART	3.3 V	I/O
-	Ground	Power	GND	15	16	I2C2_SCL	I2C_UART	3.3 V	0
I	3.3 V	SD	UART2_RX	17	18	GND	Power	Ground	_
0	3.3 V	SD	UART2_TX	19	20	I2C4_SDA	I2C_UART	3.3 V	I/O
- 1	3.3 V	SD	UART2_CTS	21	22	I2C4_SCL	I2C_UART	3.3 V	0
0	3.3 V	SD	UART2_RTS	23	24	GND	Power	Ground	_
-	Ground	Power	GND	25	26	I2C6_SDA	SD	3.3 V	I/O
I	3.3 V	SD	UART3_RX	27	28	I2C6_SCL	SD	3.3 V	0
0	3.3 V	SD	UART3_TX	29	30	GND	Power	Ground	_
- 1	3.3 V	SD	UART3_CTS	31	32	ISO_7816_CLK	TQMa8MPxL	3.3 V	1
0	3.3 V	SD	UART3_RTS	33	34	ISO_7816_RST	TQMa8MPxL	3.3 V	1
-	Ground	Power	GND	35	36	ISO_7816_IO1	TQMa8MPxL	3.3 V	I/O
I	3.3 V	I2C_UART	UART4_RX	37	38	ISO_7816_IO2	TQMa8MPxL	3.3 V	I/O
0	3.3 V	I2C_UART	UART4_TX	39	40	GND	Power	Ground	-



3.3.20 Pin header (continued)

Table 23: Pinout header X62

Dir.	Level	Group	Signal	Pin	Pin	Signal	Group	Level	Dir.
0	5 V	Power	V_5V_SW	1	2	V_1V8	Power	1.8 V	0
0	3.3V	SAI2_SAI3	SAI2_TXD0	3	4	V_3V3_MB	Power	3.3 V	0
0	3.3V	SAI2_SAI3	SAI2_TXFS	5	6	GND	Power	Ground	-
0	3.3V	SAI2_SAI3	SAI2_TXC	7	8	QSPI1A_SCLK	NAND	1.8 V	0
I	3.3V	SAI2_SAI3	SAI2_RXFS	9	10	QSPI1A_DATA0	NAND	1.8 V	I/O
- 1	3.3V	SAI2_SAI3	SAI2_RXC	11	12	QSPI1A_DATA1	NAND	1.8 V	I/O
I	3.3V	SAI2_SAI3	SAI2_RXD0	13	14	QSPI1A_DATA2	NAND	1.8 V	I/O
-	Ground	Power	GND	15	16	QSPI1A_DATA3	NAND	1.8 V	I/O
I/O	3.3V	SAI2_SAI3	SAI2_MCLK	17	18	QSPI1A_SS0#	NAND	1.8 V	0
-	Ground	Power	GND	19	20	GND	Power	Ground	_
I	3.3V	SAI2_SAI3	SAI2_RXD1	21	22	RTC_EVENT#	TQMa8MPxL	3.3 V	0
- 1	3.3V	SAI2_SAI3	SAI2_RXD2	23	24	M7_NMI	GPIO	3.3 V	ı
- 1	3.3V	SAI2_SAI3	SAI2_RXD3	25	26	TEMP_EVENT#	TQMa8MPxL	3.3 V	0
0	3.3V	SAI2_SAI3	SAI2_TXD1	27	28	GND	Power	Ground	-
0	3.3V	SAI2_SAI3	SAI2_TXD2	29	30	FAN_PWR	MBa8MPxL	VAR	I
0	3.3V	SAI2_SAI3	SAI2_TXD3	31	32	PMIC_WDOG_IN#	TQMa8MPxL	3.3 V	I
-	Ground	Power	GND	33	34	GND	Power	Ground	-
I/O	3.3 V	SAI2_SAI3	SPDIF_EXT_CLK	35	36	USER_LED0	MBa8MPxL	VAR	I
I	3.3 V	SAI2_SAI3	SPDIF_IN	37	38	USER_LED1	MBa8MPxL	VAR	I
0	3.3 V	SAI2_SAI3	SPDIF_OUT	39	40	USER_LED2	MBa8MPxL	VAR	I

Table 24: Pinout header X63

Dir.	Level	Group	Signal	Pin	Pin	Signal	Group	Level	Dir.
0	5 V	Power	V_5V_SW	1	2	V_1V8	Power	1.8 V	0
0	3.3 V	SAI2_SAI3	PWM4	3	4	V_3V3_MB	Power	3.3 V	0
-	Ground	Power	GND	5	6	GND	Power	Ground	_
0	1.8 V	ECSPI_HDMI	ECSPI2_CS0	7	8	ECSPI1_CS0	ECSPI_HDMI	1.8 V	0
I/O	1.8 V	ECSPI_HDMI	ECSPI2_MISO	9	10	ECSPI1_MISO	ECSPI_HDMI	1.8 V	
I/O	1.8 V	ECSPI_HDMI	ECSPI2_MOSI	11	12	ECSPI1_MOSI	ECSPI_HDMI	1.8 V	0
0	1.8 V	ECSPI_HDMI	ECSPI2_SCLK	13	14	ECSPI1_SCLK	ECSPI_HDMI	1.8 V	0
-	Ground	Power	GND	15	16	GND	Power	Ground	_
I	3.3 V	I2C_UART	GPT1_CPTR2	17	18	SWITCH_A#	MBa8MPxL	3.3 V	0
I/O	3.3 V	I2C_UART	GPT1_CLK	19	20	SWITCH_B#	MBa8MPxL	3.3 V	0



3.4 Diagnostic and user interfaces

3.4.1 Boot Mode configuration

The Boot Mode is set with the 4-fold DIP switch S1 at the four i.MX 8M Plus pins Boot_Mode[3:0]. Information on the boot configuration of the i.MX 8M Plus can be found in the i.MX 8M Plus documentation; see Table 31.

Table 25: Boot Source options TQMa8MPxL

Boot Mode[3:0]	Boot Source
0 0 0 0	Boot from eFuses
0 0 0 1	Serial Downloader
0 0 1 0	Boot from USDHC3
0 0 1 1	Boot from USDHC2 (SD card)
0 1 0 x	Boot from NAND (not supported)
0 1 1 0	Boot from QSPI (3-Byte Read)
0 1 1 1	Boot from QSPI (Hyperflash)
1 0 0 0	Boot from eCSPI (not supported)

3.4.2 Pushbuttons

On the MBa8MPxL two pushbuttons are routed to a pin header and can be connected to any other signal from there. SWITCH_A# and GPT1_CPTR2, as well as SWITCH_B# and GPT1_CLK can each be connected via 0 Ω bridges. The signals between pushbutton and pin header have 10 k Ω pull-ups to 3.3 V. The pushbuttons switch to ground.

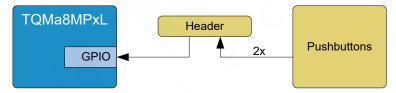


Figure 22: Block diagram pushbuttons

3.4.3 Reset button

More information can be found in chapter 3.1.7.



3.4.4 Status LEDs

The MBa8MPxL offers 20 diagnosis and status LEDs (plus the ones in the RJ45 connectors) to signal the system status.

Table 26: Status LEDs

Interface	Ref.	Colour	Indication
	V127	Green	Status V_VBUS30_H1 (lit when USB 3.0 port 1 is active)
USB	V128	Green	Status V_VBUS30_H2 (lit when USB 3.0 port 2 is active)
	V131	Green	Status V_VBUS_OTG (lit when USB 3.0 OTG is active)
USB debug	V143	Green	Status 3.3 V Debug (lit when 3.3 V for FTDI chip is active)
	V55	Green	Free LED, per light guide at front. Placement option: SPDIF_EXT_CLK
GPIO	V56	Green	Free LED, per light guide at front. Placement option: SPDIF_IN
	V60	Yellow	Free LED, per light guide at front. Placement option: SPDIF_OUT
	V3	Green	Status 24 V high-side switch (lit when high-side switch is active)
	V4	Green	Status 24 V MBa8MPxL (lit when 24 V for MBa8MPxL is active)
	V5	Green	Status 12 V MBa8MPxL (lit when 12 V for MBa8MPxL is active)
	V6	Green	Status 5 V MBa8MPxL (lit when 5 V for MBa8MPxL is active)
Power	V7	Green	Status 3.3 V MBa8MPxL (lit when 3.3 V for MBa8MPxL is active)
Power	V8	Green	Status 1.8 V MBa8MPxL (lit when 1.8 V for MBa8MPxL is active)
	V9	Green	Status 5 V TQMa8MPxL (lit when 5 V for TQMa8MPxL is active)
	V10	Orange	Status 3.3 V SD card (lit when 3.3 V for SD card is active)
	V11	Orange	Status 3.3 V TQMa8MPxL (lit when 3.3 V of TQMa8MPxL is active)
	V12	Orange	Status 1.8 V TQMa8MPxL (lit when 1.8 V of TQMa8MPxL is active)
LVDS	V111	Green	Indicator LED for LVDS interface
Reset	V59	Red	Reset LED (lit when TQMa8MPxL is in reset)
PCIe (M.2)	V132	Green	Indicator LED for M.2 devices
Ethernet	X66	-	See 3.3.1

3.4.5 GPIO

All GPIOs provided by the TQMa8MPxL are used as control signals on the MBa8MPxL and are therefore not available. GPIOs can however be configured from signals available at the pin headers; see chapter 3.3.20.

A complete list of all possible GPIO pins can be found in the i.MX 8M Plus data sheet (1).



3.4.6 JTAG®

The JTAG® port of the i.MX 8M Plus is routed to a standard ARM® 10-pin JTAG® connector (X22) on the MBa8MPxL. The pull-ups for the signals TDI, TMS, TRST# and SRST# are populated on the MBa8MPxL. All signals have 3.3 V level. JTAG_SRST# is connected to RESET_IN# via a buffer. The same reset can be executed as with reset button S7. The JTAG® interface is not ESD protected.

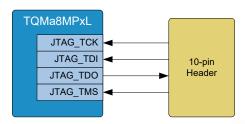


Figure 23: Block diagram JTAG

The following table shows the JTAG® connector pinout.

Table 27: Pinout JTAG® pin header, X22

Pin	Signal	Remark
1	V _{ref} / VCC	3.3 V, optional: 1.8 V
2	JTAG_TMS	10 kΩ PU to 3.3 V, (NP)
3	GND	- //
4	JTAG_TCK	10 kΩ PU, 10 kΩ PD, both (NP)
5	GND	-
6	JTAG_TDO	-
7	Key	(NC)
8	JTAG_TDI	10 kΩ PU to 3.3 V, (NP)
9	GND_DETECT	10 kΩ PD
10	JTAG_SRST#	RESET_IN#, 10 kΩ PU to 3.3 V

4. SOFTWARE

No software is required for the MBa8MPxL. Suitable software is only required on the TQMa8MPxL and is not a part of this Preliminary User's Manual. More information can be found in the <u>TQ-Support Wiki for the TQMa8MPxL</u>.



5. MECHANICS

5.1 MBa8MPxL dimensions

The MBa8MPxL has overall dimensions (length \times width) of 160 \times 100 mm².

The highest component on the top side of the MBa8MPxL is approximately 15.5 mm (stacked USB Type A connector).

The highest component on the bottom side of the MBa8MPxL is approximately 12 mm (pin header).

The overall height of the MBa8MPxL is approximately 29 mm.

The TQMa8MPxL assembled on the MBa8MPxL has a height of 3.18 mm ±0.23 mm above the MBa8MPxL.

The MBa8MPxL provides four 3.2 mm housing mounting holes, and four 2.7 mm heat sink mounting holes.

The MBa8MPxL including TQMa8MPxL weighs approximately 143 grams.

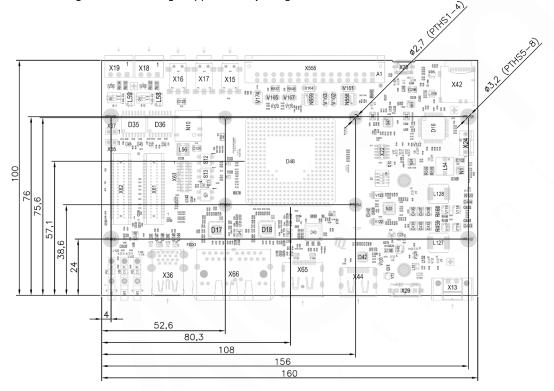


Figure 24: MBa8MPxL dimensions

5.2 Embedding in the overall system

The MBa8MPxL serves as a design base for customer products, as well as a platform to support during development.

5.3 Housing

The form factor and the mounting holes of the MBa8MPxL are designed for installation in a standard EURO housing.

5.4 Thermal management

The combination of MBa8MPxL and TQMa8MPxL has a power consumption of approximately 5 to 6 watts. Further power consumption occurs mainly at externally connected devices.

Attention: TQMa8MPxL heat dissipation



The i.MX 8M Plus belongs to a performance category in which a cooling system is essential. It is the user's sole responsibility to define a suitable heat sink (weight and mounting position) depending on the specific mode of operation (e.g., dependence on clock frequency, stack height, airflow, and software).

Particularly the tolerance chain (PCB thickness, board warpage, BGA balls, BGA package, thermal pad, heatsink) as well as the maximum pressure on the TQMa8MPxL must be taken into consideration when connecting the heat sink.

The TQMa8MPxL is not the highest component. Inadequate cooling connections can lead to overheating of the TQMa8MPxL or the MBa8MPxL and thus malfunction, deterioration or destruction.



5.5 Assembly

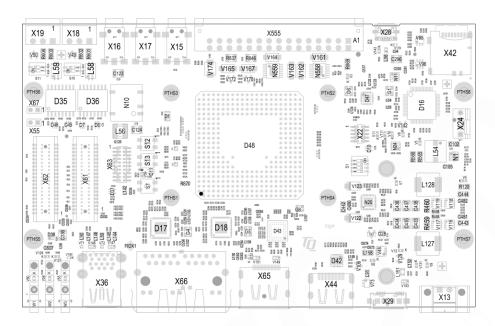


Figure 25: MBa8MPxL component placement top

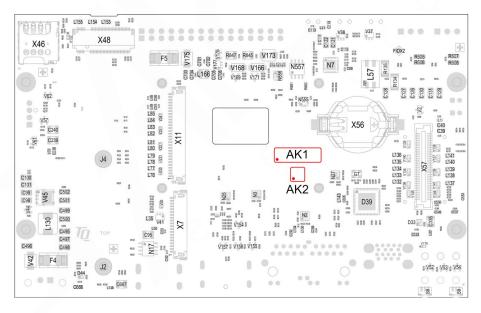


Figure 26: MBa8MPxL component placement bot

The labels on the MBa8MPxL show the following information:

Table 28: Labels on MBa8MPxL

Label	Content	
AK1	MBa8MPxL version and revision, tests performed	
AK2	Serial number	



6. SAFETY REQUIREMENTS AND PROTECTIVE REGULATIONS

6.1 EMC

Since the MBa8MPxL is a development platform, no EMC tests have been performed.

6.2 ESD

Most interfaces provide ESD protection. Details are to be taken from the MBa8MPxL schematics.

6.3 Operational safety and personal security

Tests for operational safety and personal protection were not carried out due to the voltages ≤30 V DC.

7. CLIMATIC AND OPERATIONAL CONDITIONS

In general reliable operation is given when the following conditions are met:

Table 29: Climatic and operational conditions MBa8MPxL

Parameter	Range	Remark
Ambient temperature	0 °C to +60 °C	With Lithium battery
Ambient temperature	0 °C to +70 °C	Without Lithium battery
Storage temperature	−10 °C to +60 °C	With Lithium battery
Relative humidity (operation / storing)	10 % to 90 %	Not condensing

Attention: TQMa8MPxL heat dissipation



The i.MX 8M Plus belongs to a performance category in which a cooling system is essential. It is the user's sole responsibility to define a suitable heat sink (weight and mounting position) depending on the specific mode of operation (e.g., dependence on clock frequency, stack height, airflow, and software).

Particularly the tolerance chain (PCB thickness, board warpage, BGA balls, BGA package, thermal pad, heatsink) as well as the maximum pressure on the TQMa8MPxL must be taken into consideration when connecting the heat sink.

The TQMa8MPxL is not the highest component. Inadequate cooling connections can lead to overheating of the TQMa8MPxL or the MBa8MPxL and thus malfunction, deterioration or destruction.

7.1 Protection against external effects

Protection class IP00 was defined for the MBa8MPxL. There is no protection against foreign objects, touch or humidity.

7.2 Reliability and service life

No detailed MTBF calculation has been done for the MBa8MPxL.

The MBa8MPxL is designed to be insensitive to vibration and impact.



8. ENVIRONMENT PROTECTION

8.1 RoHS

The MBa8MPxL is manufactured RoHS compliant. All components, assemblies and soldering processes are RoHS compliant.

8.2 WEEE®

The final distributor is responsible for compliance with the WEEE® regulation. Within the scope of the technical possibilities, the MBa8MPxL was designed to be recyclable and easy to repair.

8.3 REACH®

The EU-chemical regulation 1907/2006 (REACH® regulation) stands for registration, evaluation, certification and restriction of substances SVHC (Substances of very high concern, e.g., carcinogen, mutagen and/or persistent, bio accumulative and toxic). Within the scope of this juridical liability, TQ-Systems GmbH meets the information duty within the supply chain with regard to the SVHC substances, insofar as suppliers inform TQ-Systems GmbH accordingly.

8.4 EuP

The Ecodesign Directive, also Energy using Products (EuP), is applicable to products for the end user with an annual quantity >200,000. The MBa8MPxL must therefore always be seen in conjunction with the complete device. The available standby and sleep modes of the components on the MBa8MPxL enable compliance with EuP requirements for the MBa8MPxL.

8.5 Packaging

The MBa8MPxL is delivered in reusable packaging.

8.6 Batteries

8.6.1 General notes

Due to technical reasons a battery is necessary for the MBa8MPxL. Batteries containing mercury (Hg), cadmium (Cd) or lead (Pb) are not used. If this is for technical reasons unavoidable, the device is marked with the corresponding hazard note. To allow a separate disposal, batteries are generally only mounted in sockets.

8.6.2 Lithium batteries

The requirements concerning special provision 188 of the ADR (section 3.3) are complied with for Lithium batteries.

There is therefore no classification as dangerous goods:

- Basic lithium content per cell not more than 1 grams (except for lithium ion and lithium polymer cells for which a lithium content of not more than 1.5 grams per cell applies (equals 5 Ah)).
- Basic lithium content per battery not more than 2 grams (except for lithium ion batteries for which a lithium content of not more than 8 grams per cell applies (equals 26 Ah)).
- Lithium cells and batteries are examined according to UN document ST/SG/AC.10-1.

During transport a short circuit or discharging of the socketed lithium battery is prevented by extricable insulating foils or by other suitable insulating measures.

8.7 Other entries

By environmentally friendly processes, production equipment and products, we contribute to the protection of our environment. To be able to reuse the MBa8MPxL, it is produced in such a way (a modular construction) that it can be easily repaired and disassembled. The energy consumption of the MBa8MPxL is minimised by suitable measures.

Because currently there is still no technical equivalent alternative for printed circuit boards with bromine-containing flame protection (FR-4 material), such printed circuit boards are still used. No use of PCB containing capacitors and transformers (polychlorinated biphenyls). These points are an essential part of the following laws:

- The law to encourage the circular flow economy and assurance of the environmentally acceptable removal of waste as at 27.9.94 (Source of information: BGBI I 1994, 2705)
- Regulation with respect to the utilization and proof removal as at 1.9.96 (Source of information: BGBI I 1996, 1382, (1997, 2860))
- Regulation with respect to the avoidance and utilization of packaging waste as at 21.8.98 (Source of information: BGBI I 1998, 2379)
- Regulation with respect to the European Waste Directory as at 1.12.01 (Source of information: BGBI I 2001, 3379)

This information is to be seen as notes. Tests or certifications were not carried out in this respect.



9. APPENDIX

9.1 Acronyms and definitions

The following acronyms and abbreviations are used in this document:

Table 30: Acronyms

Acronym	Meaning
ADC	Analog/Digital Converter
Al	Artificial Intelligence
ARM®	Advanced RISC Machine
BGA	Ball Grid Array
BIOS	Basic Input/Output System
CAN	Controller Area Network
CAN FD	Controller Area Network Flexible Data-Rate
CCM	Clock Control Module
CPU	Central Processing Unit
CSI	Camera Serial Interface
DIP	Dual In-line Package
DNC	Do Not Connect
DP	DisplayPort
DSI	Display Serial Interface
eCSPI	enhanced Capability Serial Peripheral Interface
eDP	embedded DisplayPort
EEPROM	Electrically Erasable Programmable Read-Only Memory
EMC	Electromagnetic Compatibility
eMMC	embedded Multimedia Card (Flash)
ESD	Electrostatic Discharge
EU	European Union
EuP	Energy using Products
FPS	Frames Per Second
FR-4	Flame Retardant 4
GP	General Purpose
GPIO	General Purpose Input/Output
GPT	General Purpose Timer
HD	High Density (graphics)
HDMI	High-Definition Multimedia Interface
HSS	High-Side Switch
1	Input
I/O	Input/Output
I ² C	Inter-Integrated Circuit
IEEE®	Institute of Electrical and Electronics Engineers
IP00	Ingress Protection 00
JTAG [®]	Joint Test Action Group
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LGA	Land Grid Array
LPDDR4	Low-Power DDR4
LVDS	Low Voltage Differential Signal



9.1 Acronyms and definitions (continued)

Table 30: Acronyms (continued)

Acronym	Meaning
MAC	Media Access Controller
MIC	Microphone
MIPI	Mobile Industry Processor Interface
ML	Machine Learning
MTBF	Mean operating Time Between Failures
NAND	Not-And (flash memory)
NC	Not Connected
NMI	Non-Maskable Interrupt
NOR	Not-Or
NP	Not Placed
0	Output
OTG	On-The-Go
Р	Power
PCB	Printed Circuit Board
PCle	Peripheral Component Interconnect express
PCMCIA	People Can't Memorize Computer Industry Acronyms
PD	Pull-Down
PHY	Physical (layer of the OSI model)
PMIC	Power Management Integrated Circuit
PU	Pull-Up
PWM	Pulse-Width Modulation
QSPI	Quad Serial Peripheral Interface
REACH®	Registration, Evaluation, Authorisation (and restriction of) Chemicals
RGMII	Reduced Gigabit Media-Independent Interface
RJ45	Registered Jack 45
RoHS	Restriction of (the use of certain) Hazardous Substances
RPM	Revolutions Per Minute
RTC	Real-Time Clock
SAI	Serial Audio Interface
SD	Secure Digital
SDHC	Secure Digital High Capacity
SDRAM	Synchronous Dynamic Random Access Memory
SIM	Subscriber Identification Module
SPDIF	Sony-Philips Digital Interface Format
SVHC	Substances of Very High Concern
TSE	Trust Secure Element
UART	Universal Asynchronous Receiver/Transmitter
UHS	Ultra-High Speed
UM	User's Manual
UN	United Nations
USB	Universal Serial Bus
uSDHC	Ultra-Secured Digital Host Controller
WEEE®	Waste Electrical and Electronic Equipment
ZIF	Zero Insertion Force



9.2 References

Table 31: Further applicable documents

No.	Name	Rev. / Date	Company
(1)	i.MX 8M Plus Applications Processor Data Sheet	Rev. F / 10/2020	<u>NXP</u>
(2)	i.MX 8M Plus Applications Processor Reference Manual	Rev. / 2020	<u>NXP</u>
(3)	Mask Set Errata i.MX 8M Plus	– current –	<u>NXP</u>
(4)	TQMa8MPxL User's Manual	– current –	TQ-Systems
(5)	TQMa8MPxL Support Wiki	– current –	TQ-Systems

